


AQUATECH

PARTS BULLETIN

This is an informational bulletin to help identify the hydraulic filters on standard B-Series machines.

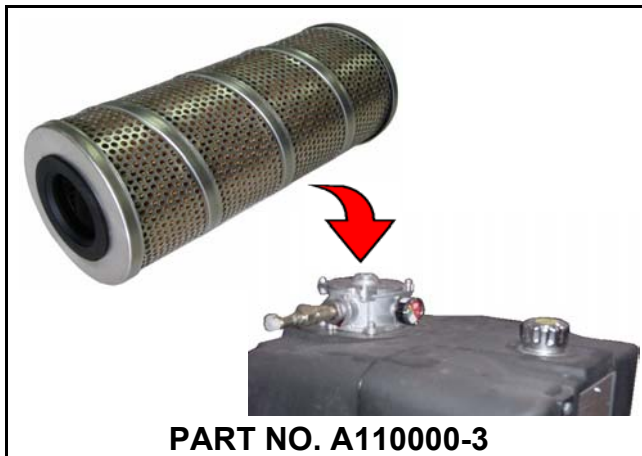


Replacement hydraulic filter element. Located inside return filter housing on top of hydraulic reservoir.



Spin-on suction hydraulic filter. Located near the outlet of the hydraulic reservoir right after the gate valve and prior to the hydraulic pump. This is the primary filter for the hydraulic system



Replacement high pressure hydraulic filter element. Filter housing is located after the hydraulic pump and is mounted to the power deck. We started using this filter in early 2009.

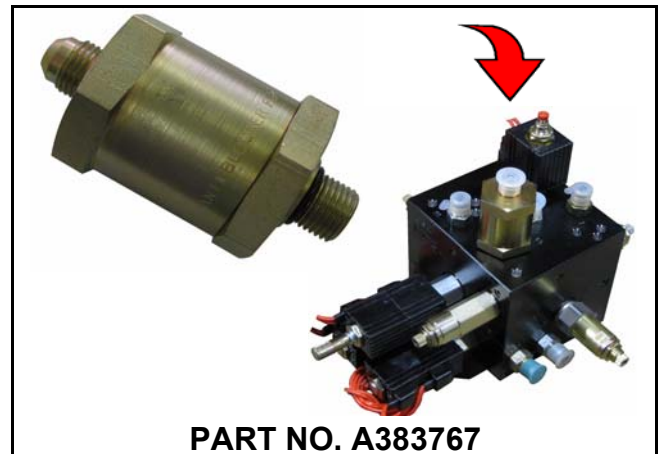

Dubbed the "Last Chance" filter, this unit screws directly into the integrated boom control valve to protect it from any contaminants that may get past the other filters. We started using this filter in early 2009.